

01

M6 Filter replacement guide

1) Filter replacement guide




1、 Turn off the power and the water. Tear down the screws of the top cover.

2) Filter replacement guide




2、 Push back the top cover to the end, and then remove the cover.

3) Filter replacement guide

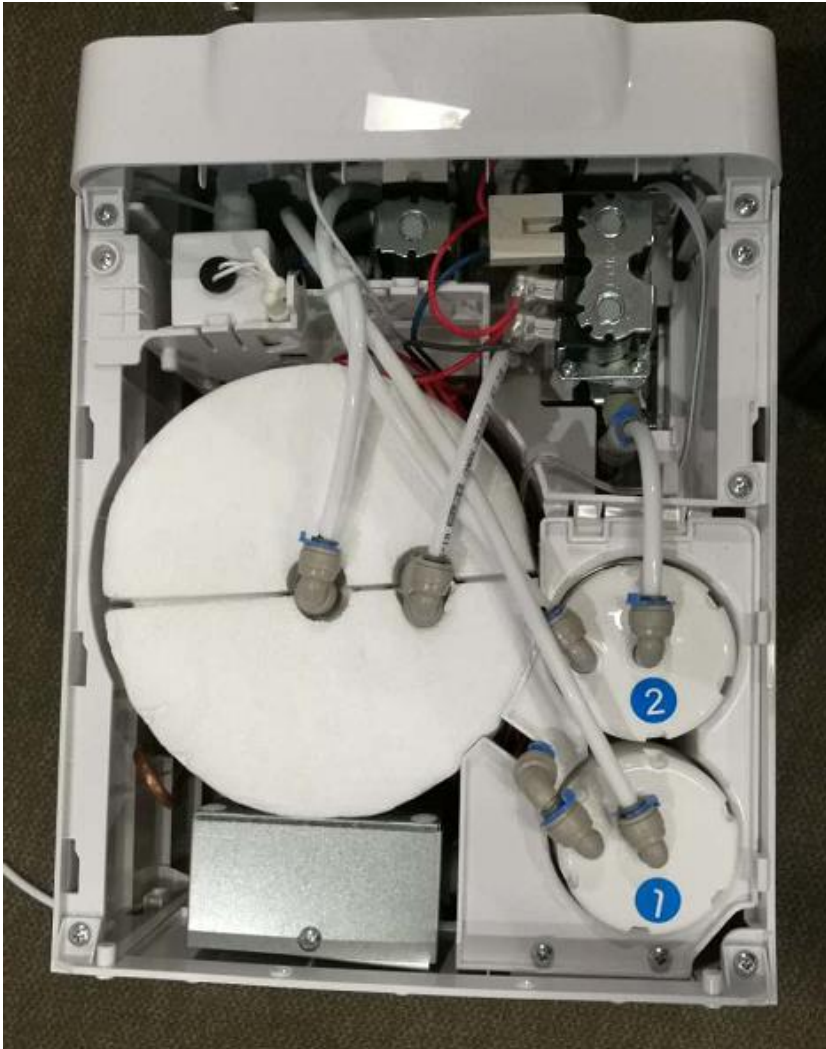

3、 The filters were placed according to the serial number.

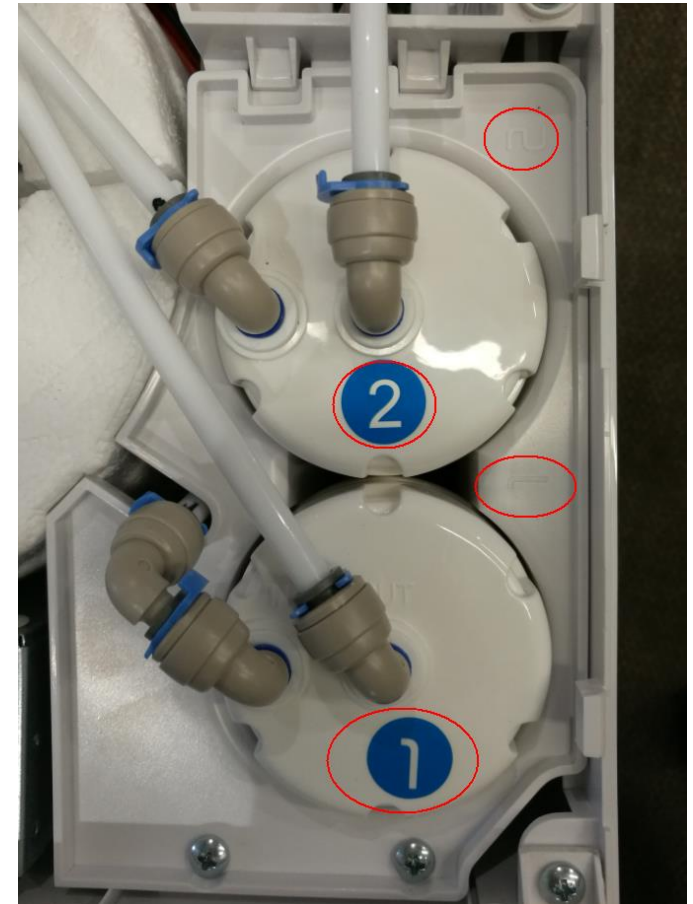

4) Filter replacement guide

4、 Push the collet inward with finger tips and hold it. And then pull the quick connector out.



5) Filter replacement guide

5、 Push the collet inward with finger tips and hold it. And then pull the quick connector out.

01



02




6) Filter replacement guide

6、 Remove the filter and replace it.

01



02

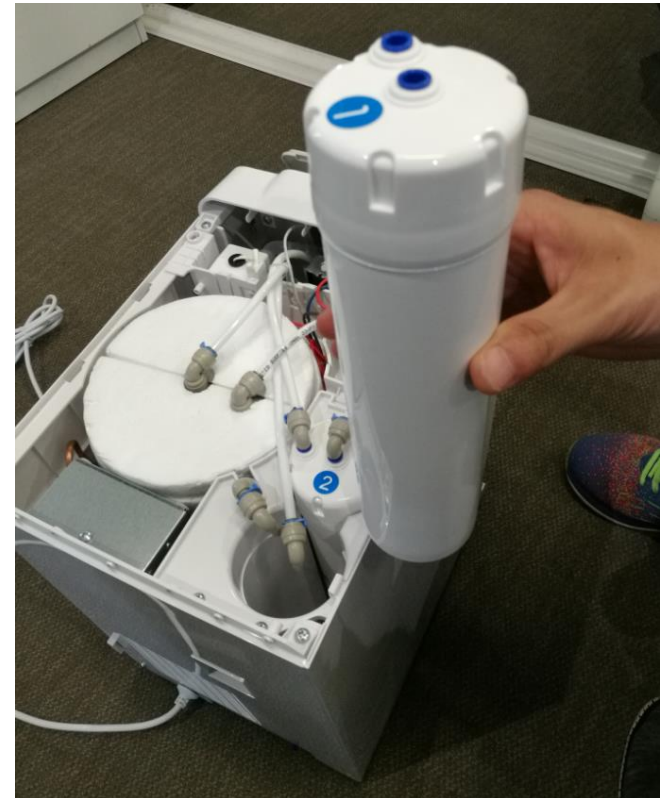

02

F1 Filter replacement guide

1) Filter replacement guide

Remove the filter cover and rotate the filter out for replacement.

